




↑ Vario settings

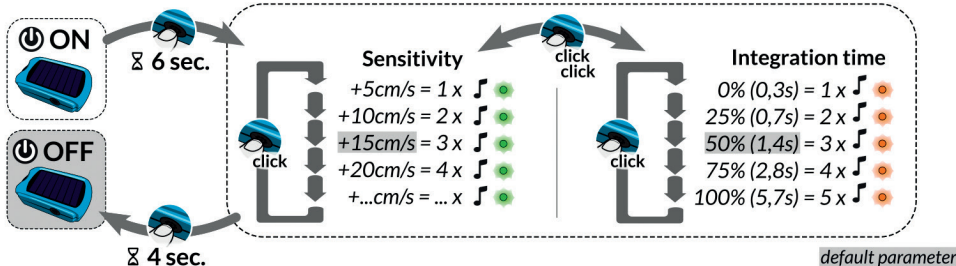

↓ Sink alarm settings

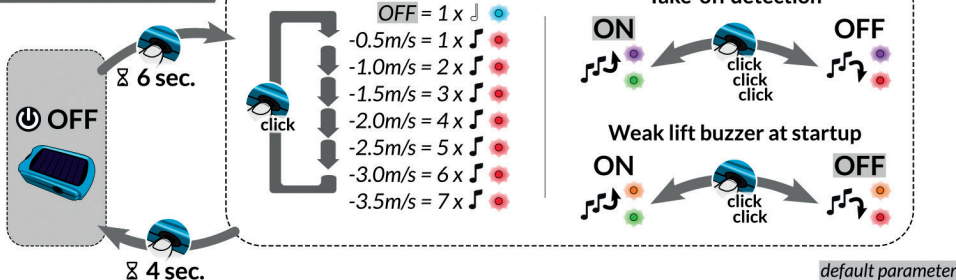


☰ Web-app Configurator

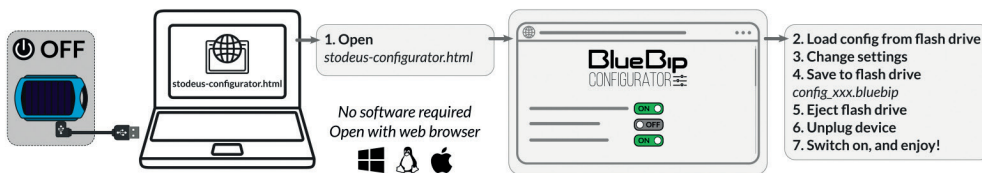

BlueBip

SOLAR BLUETOOTH INSTANT VARIOMETER

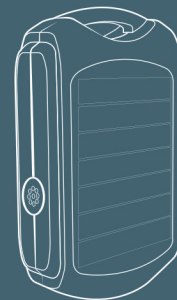

🇬🇧 QUICK START

Download it on your smartphone:

stodeus.com

Assistance

BlueBip


user manual



STODEUS
SOLAR PARAGLIDING INSTRUMENTS




Set-up

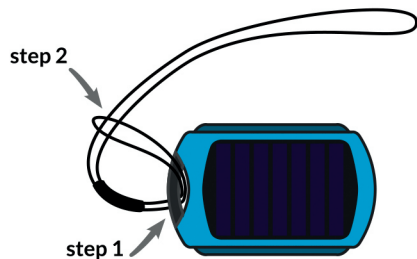


Connectivity

Android & iOS

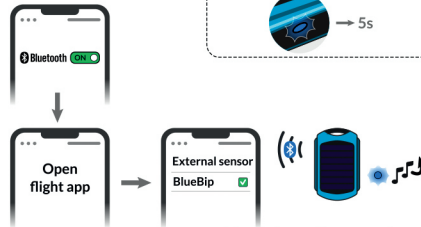

More information on stodeus.com


USB-C earphones output

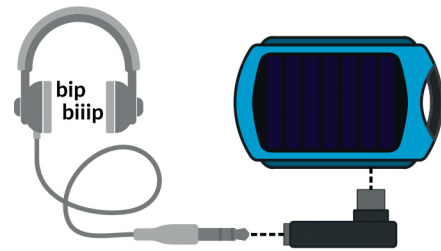

Installation



Volume

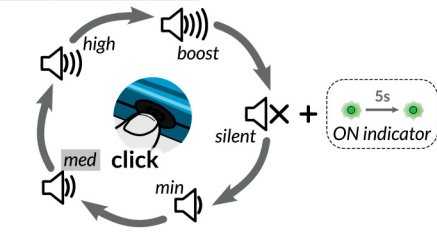


Vario is silent on ground,
changing volume will enable vario

default parameter

Battery charge

Solar charge: 20h

ON / OFF

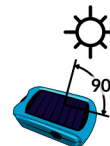

USB-C charge

quick 5min

full 2h

OFF

(5V, 200mA mini)

Do not place the device behind a window or the windshield of a car as it will damage the battery.

ON / OFF



ON : 3 sec.

OFF : 3 sec.

Battery level :

3x


2x

1x

Low battery :




Weak lift buzzer (during flight)

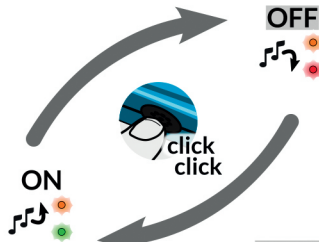

default parameter

Factory reset

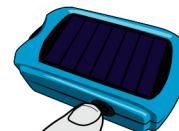

Default parameters:
Up sensitivity: +15cm/s
Integration time: 50%
Sink alarm: OFF
Take-off detection: ON
Weak lift buzzer: OFF
Volume: medium
Auto power off: 30min